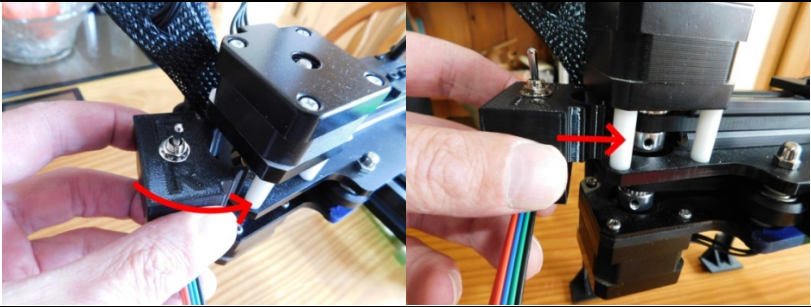
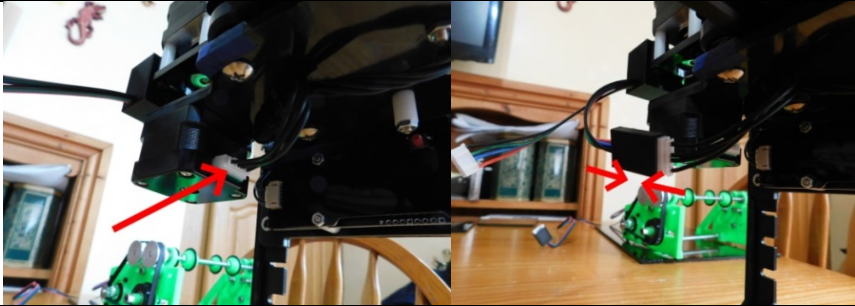
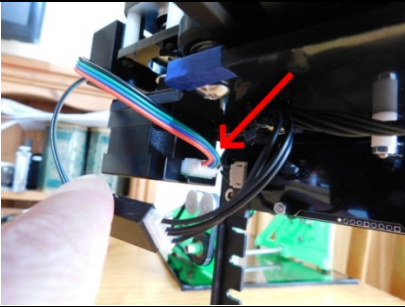
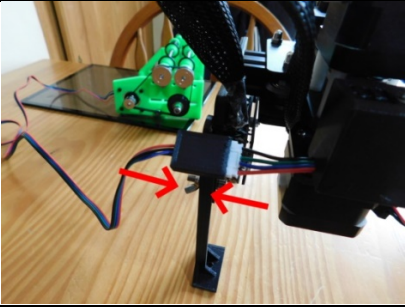
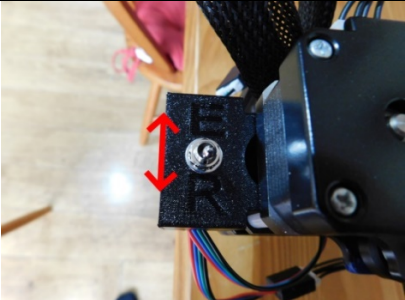


Rotary Switch Box Instructions

Fitting the Switch Box to the Neje Master 1&2 and the Ortur Master 1

Probably best performed with the engraver switched off 😊

<p>Hook one end of the switchbox onto the inside of the motor support and rotate the other as shown. The Switchbox should click into place.</p>	
<p>Remove the plug from the lower 'Y' stepper motor and plug it into the black socket on the Switchbox.</p>	
<p>Connect the remaining long cable with the white plug into the socket on the lower 'Y' stepper motor.</p>	
<p>Connect the final short cable with the white plug into the black socket on your rotary's cable.</p>	
<p>Finally select which motor you wish to power.</p> <p>E – Engraver 'Y' axis R – Rotary Roller / DD Pen Jig</p>	

Available Here: <https://www.jafweb.co.uk/index.php/product/rotary-direct-drive-switch-box/>